


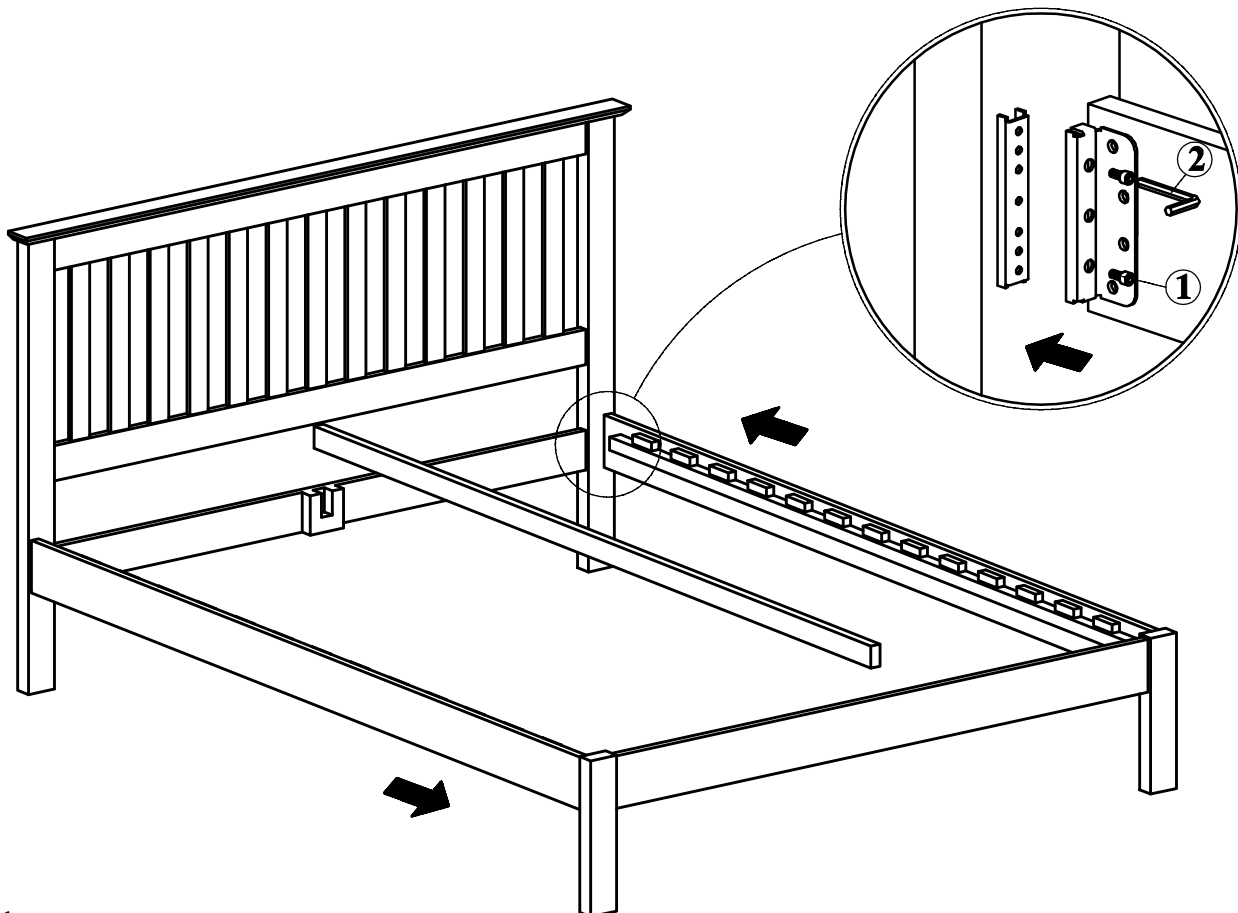
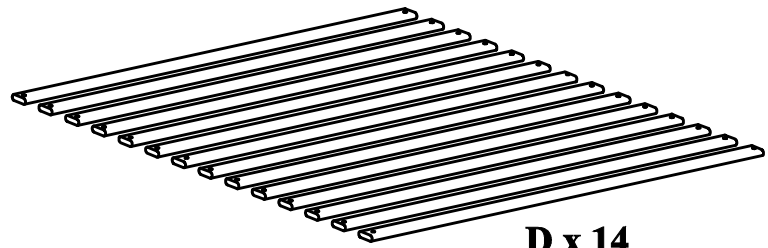
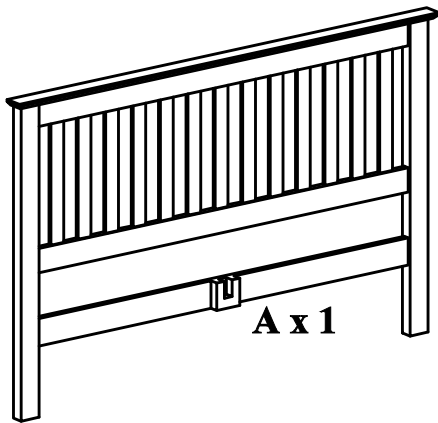
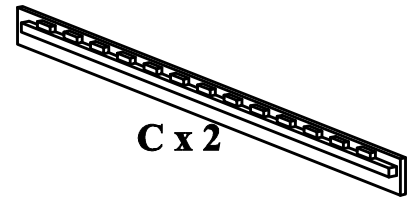
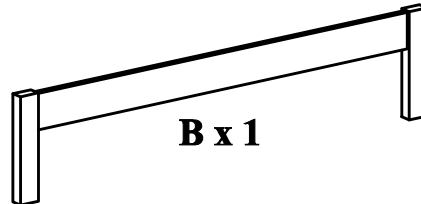
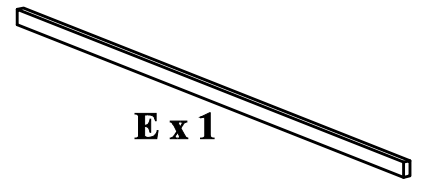
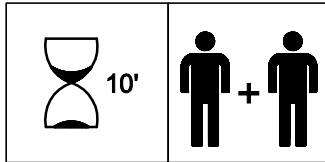


# ASSEMBLY INSTRUCTIONS

## ALDERLEY-OAK-KNG


### HARDWARE FOR WOODEN

| No. | Hardware  | Q.ty |
|-----|---|------|
| ①   | Bolts M5x10  | 08   |
| ②   | Key K5       | 01   |
| ③   | Vis M4x30    | 28   |



# ASSEMBLY INSTRUCTIONS

## ALDERLEY-OAK-KNG

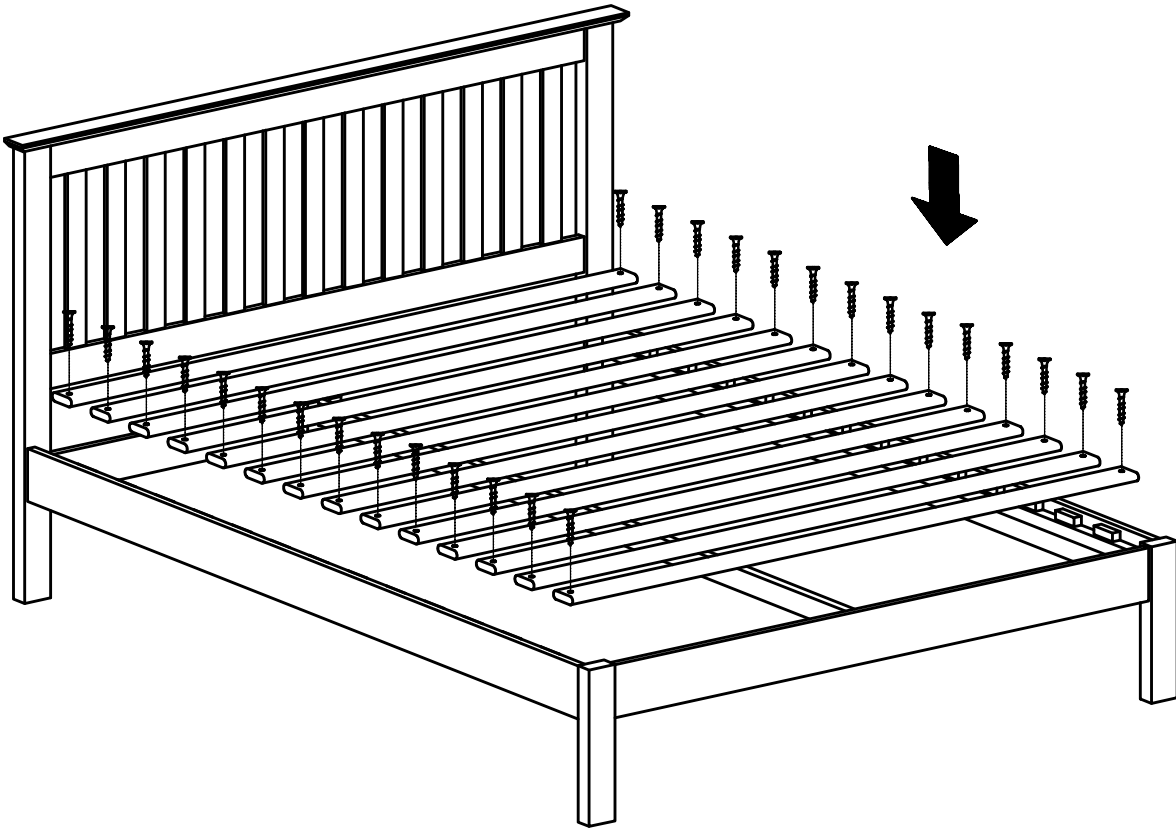

**STEP 2**

